

Canvas Roll Curtains, Complete

		<i>W i d t h (in feet)</i>																		
		Suggested Retail Prices, 5-1-2000																		
		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
<i>D r o p</i>	4	122	122	122	122	122	122	144	166	190	190	211	234	256	277	277	298	319	344	366
	5	122	122	122	122	144	166	190	211	234	256	277	298	319	344	366	387	411	433	458
	6	122	122	122	144	166	190	211	234	277	298	319	344	366	411	433	458	480	501	544
	7	122	122	122	166	190	211	256	277	319	344	366	411	433	480	501	522	565	586	637
	8	122	122	144	190	211	256	277	319	366	387	433	458	501	544	565	608	637	680	722
	9	122	122	166	211	234	277	319	366	411	433	480	522	565	608	637	680	722	774	822
	10	122	144	190	234	277	319	366	411	458	501	544	586	637	680	722	774	822	867	917
	11	122	144	190	256	298	344	387	433	501	544	586	637	680	748	798	845	892	938	1002
	12	122	166	211	277	319	366	433	480	544	586	637	701	748	822	867	917	981	1024	1088
	13	122	166	234	298	344	411	458	522	586	637	701	748	822	892	938	1002	1045	1109	1179
	14	122	190	256	319	366	433	501	565	637	680	748	822	892	960	1002	1066	1130	1204	1278
	15	144	211	277	344	411	480	544	608	680	748	822	892	960	1024	1088	1155	1228	1302	1376
	16	144	211	277	366	433	501	565	637	722	798	867	938	1002	1088	1155	1228	1302		
	17	144	234	298	387	458	522	608	680	774	845	917	1002	1066	1155	1228	1302			
	18	166	234	319	411	480	565	637	722	822	892	981	1045	1130	1228	1302				
	19	166	256	344	433	501	586	680	774	867	938	1024	1109	1204	1302					
	20	190	277	366	458	544	637	722	822	917	1002	1088	1179	1278	1376					

Series 5.25

Price includes hardware and canvas. For recovers, use 2/3 of price.

INSTALLATION INSTRUCTIONS

ROLLER CURTAINS

1	<p>FASTEN ROLLER CURTAIN CLAMPS to wall, ceiling, or face board (see Fig. 1). Locate one clamp 10" in from either end of curtain location. Clamp must be in <u>upright position</u> as shown in drawing, but may be fastened with screws driven either through clamp's back holes, or up through top holes.</p> <p>NOTE: Roller Curtains of differing lengths require the following number of equally-spaced clamps: under 6' - two clamps; over 6' - three clamps; over 12' - four clamps; over 18' - five clamps, etc.</p>
2	<p>INSERT ONE DOUBLE-EYED METAL BAND THROUGH EACH GLASS RING. Bend band into U-shape, match eyes, and twist eyes with pliers. Place one glass ring/band assembly onto one of the two prongs of each Roller Curtain Clamp (see Fig. 1).</p>
3	<p>FASTEN METAL ROPE CLEAT to house wall or window casing at one end of curtain's location, at spot convenient to homeowner (see Fig. 2).</p>
4	<p>THREAD ROPES THROUGH GLASS RINGS AND TIE OFF THROUGH HOLE IN ROLLER CURTAIN CLAMPS AS SHOWN IN FIG. 2. MAKE A "ROPE LOOP" BELOW EACH RING ASSEMBLY (SEE FIG. 2) LONG ENOUGH TO ACCOMMODATE CURTAIN IN ITS "FULL DROP" POSITION WHILE ALLOWING FOR MINIMUM FIGURE-8 WRAPPING AROUND CLEAT.</p>
5	<p>INSERT HEAD-ROD (1/2" SOLID IRON) into small head-rod pocket along top of fabric curtain.</p>
6	<p>PASS CURTAIN (CONTAINING HEAD-ROD) THROUGH ROPE LOOPS, making certain rope loops haven't twisted. Insert top pocket of curtain (containing head-rod) under prongs of Roller Curtain Clamps, center, and securely fasten to clamps by tightening wing nuts.</p>
7	<p>INSERT ROLLER (WOOD OR LARGE PIPE) THROUGH BOTTOM CURTAIN POCKET.</p>
8	<p>EQUALIZE ROPE LENGTHS AND CHECK TO SEE THAT CURTAIN ROLLS UP AND DOWN PROPERLY. SECURE ROPES TO CLEAT.</p>

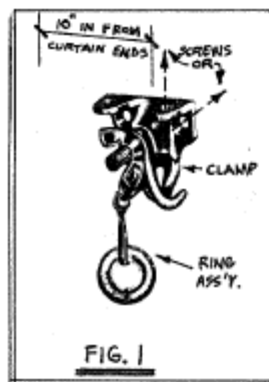


FIG. 1

NOTE:
 DIAGRAM DEPICTS CLEAT INSTALLED TO RIGHT OF CURTAIN. CLEAT MAY INSTEAD BE INSTALLED ON LEFT SIDE, IN WHICH CASE DIRECTION OF ROPE TRAVEL MUST BE REVERSED.

